


The All New
ORIGINALPK™

PK300AF™





ASSEMBLY INSTRUCTIONS



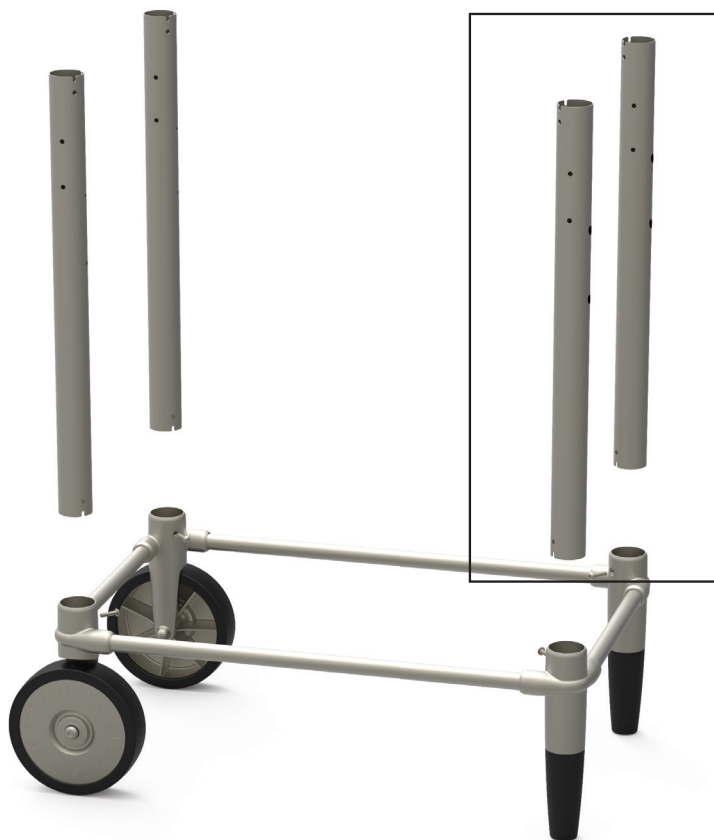

STEP 3. Place four VERTICAL TUBES into the corner lugs of LOWER CART TUBE ASSEMBLY. See Diagram for proper orientation.

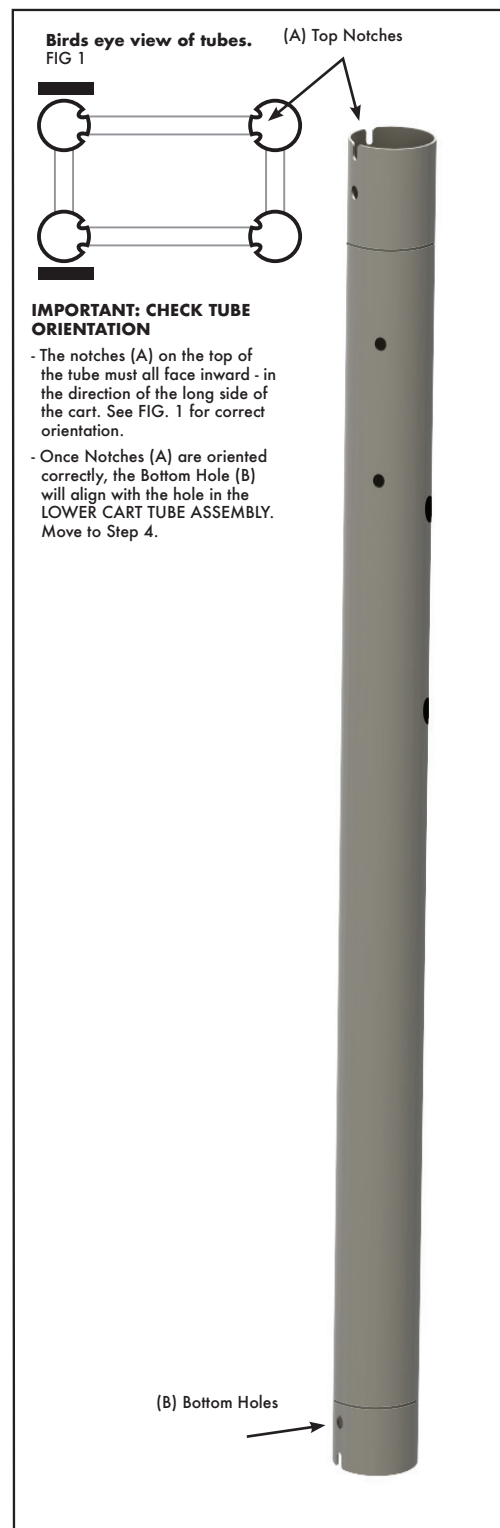

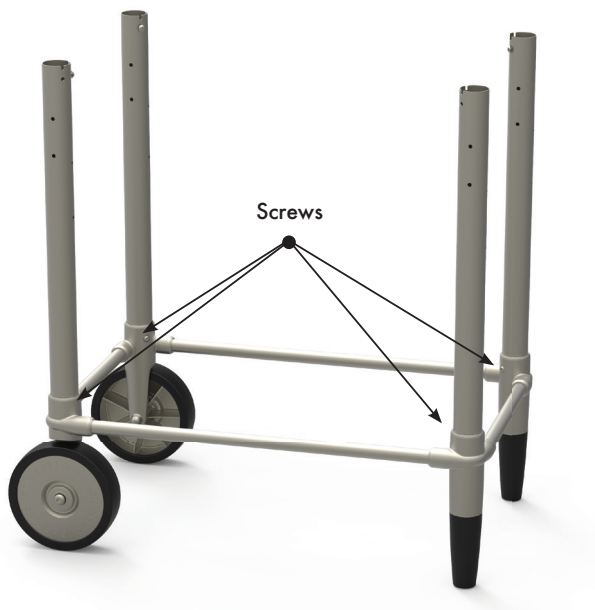

STEP 4. Affix VERTICAL TUBES to LOWER CART TUBE ASSEMBLY using provided hex screws (hardware bag B) and 4mm hex wrench. Do not fully tighten.



STEP 5. Place UPPER CART TUBE ASSEMBLY on top of the four VERTICAL TUBES as shown. The SHELF should be oriented on the side opposite the wheels.

Ensure the VERTICAL TUBES insert fully into the lugs of the UPPER CART TUBE ASSEMBLY carefully aligning the screw holes in the lugs with the holes in the tubes.

Pro Tip: It may be necessary to wiggle the entire assembly slightly to ensure all the tubes are fully seated.



STEP 6. Affix VERTICAL TUBES to UPPER CART TUBE ASSEMBLY using provided hex screws (hardware bag B) and 4mm hex wrench. **Do not fully tighten hex screws at this step.**




STEP 7. Put LOWER SHELF in place.

The assembled cart should look as shown here.

If so, fully tighten the eight (8) hex screws into the cart lugs.



STEP 8. Affix SPEED RACKS to vertical bars on stand using 5mm hex wrench
 (8) 5 mm X 45 mm long stainless steel machine screw, (8) Stainless Steel Cap nuts (hardware bag F).

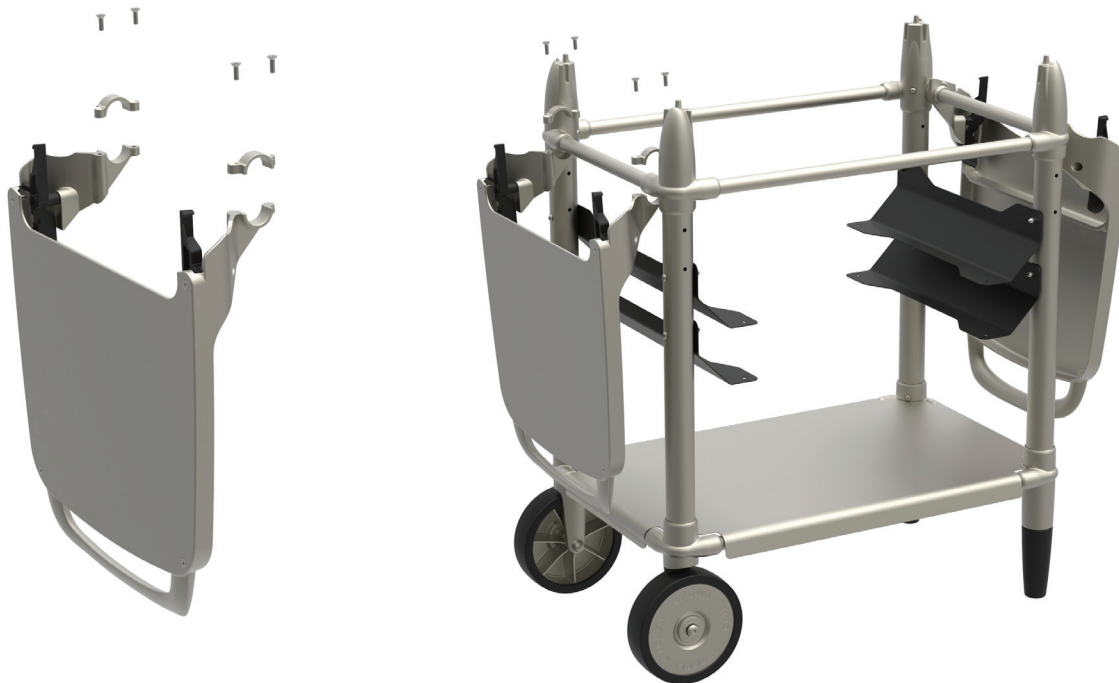


STEP 9. Affix LEFT SHELF to stand using 5mm hex wrench
 (2) C-Clamps, (4) 5mm X 16 mm long stainless steel countersunk machine screws (hardware bag G).

BELLY BAR

STEP 1. Affix 2X BELLY BAR MOUNTS to vertical bars on stand using 5mm hex wrench
(4) 5 mm X 55 mm long stainless steel machine screw (hardware bag H).



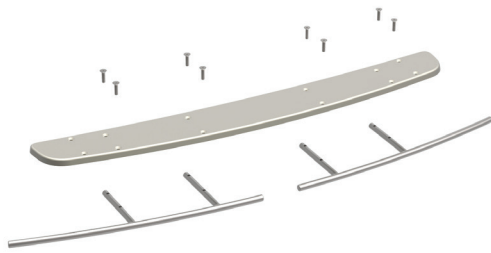

STEP 2. Affix BELLY BAR WIRE to BELLY BAR SHELF using 5mm hex wrench
(8) 5mm X 18 mm long stainless steel countersunk machine screws (hardware bag I).



STEP 3. Affix BELLY BAR SHELF to BELLY BAR MOUNTS using 5mm hex wrench
(4) 5mm X 18 mm long stainless steel countersunk machine screws (hardware bag I).

ASSEMBLE LOWER CAPSULE



STEP 1a. Attach SHELF LOCKS to LOWER CAPSULE oriented as shown using provided M6 screws and lock washers (hardware bag C).

STEP 1b. Attach VENT HANDLES to LOWER RADIAL VENTS using provided M6 screws (hardware bag D). Handles are identical, so work interchangeably with lower VENTS.



STEP 2. With the UPPER SHELF in the down position, place the LOWER CAPSULE on the cart with the hinge positioned over the wheels as shown. Note the four holes in the lip of the capsule. These holes align with the four top lugs on the UPPER CART ASSEMBLY to ensure proper orientation of the capsule.

Pro Tip: Rotate both the lower vents to the fully open position to get the handles out of the way and then lower the right side of the capsule onto the cart first, then lower the left side (hinge side) of the capsule.

STEP 3. When the LOWER CAPSULE is in place, rotate the shelf up into the locked position. This will lock the lower capsule onto the cart.

For future use, note that by squeezing the two UPPER SHELF LEVERS inward, you can lower the UPPER SHELF, which allows easy removal of the LOWER CAPSULE.

STEP 4. Put the two VENT COVERS in place inside the LOWER CAPSULE as shown.



STEP 5. Install the CHARCOAL GRATE and upper COOKING SURFACE as shown.



STEP 6. Place REMOVABLE COOKING SURFACE DOOR on right side. Note that the REMOVABLE COOKING SURFACE DOOR is designed to easily hinge open and closed or to be completely removed for easy access to coals in indirect cooking scenarios.



PRO TIP:

Use the probe port at the back of the grill to thread digital thermometer cords to clip them on the grid closest to the meat and insert a probe to monitor the meat temperature.

ASSEMBLE UPPER CAPSULE



STEP 1. Place the UPPER CAPSULE on the LOWER CAPSULE with hinge oriented as shown.



STEP 2. Open the UPPER CAPSULE into the open position and affix the handle using a Phillips head screwdriver and supplied screws and lock washers (hardware bag E) as shown. Securely tighten screws.

PRO TIP:

The bolt at the end of the capsule can be removed to install a PK Tel Tru thermometer. The round disk included in the hardware can be installed between the thermometer dial and the casting for a refined look.



www.pkgrills.com/assemblyvideos

STEP 3. Take a picture. (It will never be this pretty again.) Fire it up.

Step 4. The PK grill doesn't require a burn in or seasoning for the castings. Just clean with soap and water and then oil the cooking grid and you're ready to cook!

Step 5. Register your grill at pkgrills.com